


RWF-399 OIL RESTRICTOR FITTING

RACEWORKSTM
PASSION FOR PERFORMANCE

STEP 1


AN Hose End

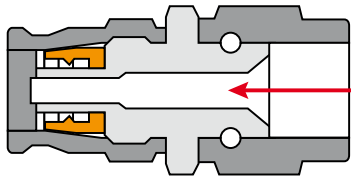

Disconnect your hose end from the AN Male Flare Adapter.

STEP 2


Restrictor

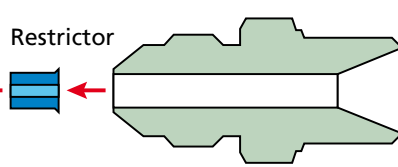

Insert the Restrictor into the hose end until it seats.

STEP 3

AN Male Flare

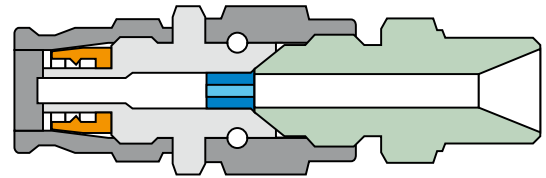

Assembled

Re-attach hose end to AN Male Flare Adapter, taking care that the Restrictor does not fall out.